

EASY HOW-TO CHANGE YOUR *Car's Air Filter*

- 1.) ALWAYS Use proper protective gear. For this project, I used a pair of gloves and protective eyeglasses.
- 2.) Loosen wing nut or other fasteners to remove filter cover.
- 3.) Remove old air filter. It will be really dirty!
- 4.) Clean filter cover and housing using a shop vacuum.
- 5.) Install new air filter, ensuring the perimeter is completely sealed.
- 6.) Replace cover and fasten shut.

You are a ROCKSTAR!